


## PROFESSIONAL AUDIO SYSTEM

# **SP530**

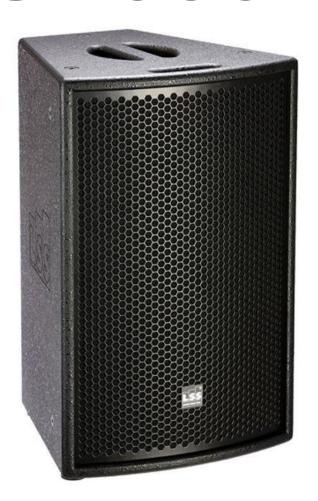

## **OPERATING MANUAL**

Ver. SP530-EN-1.1

#### **NOTICE:**

LSS products are manufactured for use according to proper procedures by a qualified operator and only for the purposes described in this manual. The following conventions are used to indicate and classify precautions in this manual. Always heed the information provided with them. Failure to heed precautions can result in injury to people or damage to property.

#### © LSS, 2016

All rights reserved. No part of this publication may be reproduced, stored in a retrieval system, or transmitted, in any form, or by any means, mechanical, electronic, photocopying, recording, or otherwise, without the prior written permission of LSS.

No patent liability is assumed with respect to the use of the information contained herein. Moreover, because LSS is constantly

striving to improve its high-quality products, the information contained in this manual is subject to change without notice. Every precaution has been taken in the preparation of this manual. Nevertheless, LSS assumes no responsibility for errors or omissions. Neither is any liability assumed for damages resulting from the use of the information contained in this publication.



## **SUMMARY**

INTRODUCTION	4
SAFETY AND WARNING	5
APPLICATION	6
PHYSICAL DESCRIPTION	6
TECHNICAL SPECIFICATIONS	7
INSTALLATION AND WIRING	
WEEE DIRECTIVE	10
DIMENSIONS	11
NOTES	12

### **INTRODUCTION**

Congratulation on the purchase of your new LSS loudspeaker.

Quality innovation and versatility, this is a summary of the new system developed by LSS for professional sound users.

LSS produces professional audio products – the result of exceptional engineering and meticulous craftsmanship.

This manual is intended for use with LSS loudspeaker. This includes: safety precautions; installation, set-up and operating instruction.

Please read this manual plus any accompanying manual and follow all relevant precautions and instructions. This should allow you to obtain the maximum performance from your new loudspeaker.

Where there are conflicts or overlaps, the information in any accompanying manual supersedes the information in this manual.



#### SAFETY AND WARNING

#### IMPORTANT! SAFETY WARNING!

In the interest of their own and others' safety and to prevent voiding the warranty, we recommend a careful reading of this section before using the product.

- This product was designed and manufactured to be used as a speaker system in the context of a typical sound reinforcement system.

The use for any purpose other than these is not provided by the manufacturer and is therefore under the direct responsibility of the user / installer.

- This device complies with class I (must be connected to the outlet with a protective earthing connection).







TO REDUCE THE RISK OF ELECTRIC SHOCK DO NOT REMOVE COVER (OR BACK) ON USER SERVICEBALE PARTS INSIDE REFER SERVICING TO QUALIFIED SERVICE PERSONNEL TO REDUCE THE RISK OF FIRE OR ELECTRIC SHOCK DO NOT EXPOSE THIS EQUIPMENT TO RAIN OR MOISTURE

#### TO AVOID THE RISK OF FIRE AND / OR ELECTRIC SHOCK\*:

- Do not expose this system to rain or moisture. Do not expose the apparatus to dripping or splashing water. Do not place objects filled with liquids, such as drinks, on the apparatus.
- Before connecting the system, be sure the mains voltage corresponds to that stated on the product.
- Connect this appliance to a power outlet with earth contact, according to national security force, via a power cable of adequate section ends with a plug or connector that meets the applicable safety regulations.
- The unit is connected to the network even when the power switch is in position '0' (OFF). Before any maintenance, disconnect the power cable from the outlet.

#### IMPORTANT! SAFETY PRECAUTIONS!

Read This First.

Read and heed all warnings and safety instructions in this Manual before using the product.

Failure to follow all precautions can result in equipment damage and / or personal injury.

- 1. Read these instructions.
- 2. Keep these instructions
- 3. Heed all warnings and follow all instructions.
- 4. Use only attachments/accessories specified by the manufacturer.
- 5. Use only with the cart, stand, tripod, bracket, or table specified by the manufacturer, or sold with the apparatus. When a cart is used, use caution when moving the cart/apparatus combination to avoid injury from tip-over.
- 6. Refer all servicing to qualified service personnel. Servicing is required when the apparatus has been damaged in any way, such as power-supply cord or plug is damaged, liquid has been spilled or objects have fallen into the apparatus, the apparatus has been exposed to rain or moisture, does not operate normally, or has been dropped.
- 7. LSS loudspeakers can produce sound levels capable of causing permanent hearing damage from prolonged exposure. The higher the sound level, the less exposure needed to cause such damage

CAUTION: This product is energized as long as it is connected to the AC.

CAUTION: Allow at least six inches of free space all around the amplifier for sufficient ventilation.

<sup>\*</sup>Risk of electric shock only for self-powered system.

SP530


### **APPLICATION**

LSS's SP530 is a 2-way loudspeaker system that provides high output, low distortion sound reinforcement for the entire range of pro audio applications. The 320 mm (12") low frequency cone with 75 mm (3") voice coil and 44 mm (1.75") voice coil high frequency compression driver provides higher output and lower distortion plus enhanced power handling capabilities for better performance in both portable and permanently installed applications. LSS's advanced crossover includes professional protection of HF.

The SP530 offers a switchable powering mode: full range or Bi-Amp passive operation using the internal crossover filter network. While ideal for distributed systems, the 13° per side trapezoid angles match the 90° horizontal coverage pattern allowing the creation of tight packed clusters. The pole mount cup and balance-optimized handles allow for quick and easy load-in for portable use. Its high output capabilities let it act as a main system for smaller concert or portable A/V events or even provide front or side fill for concert touring applications.

The comprehensive system mounting points permit safe suspension in permanent installations.

#### PHYSICAL DESCRIPTION

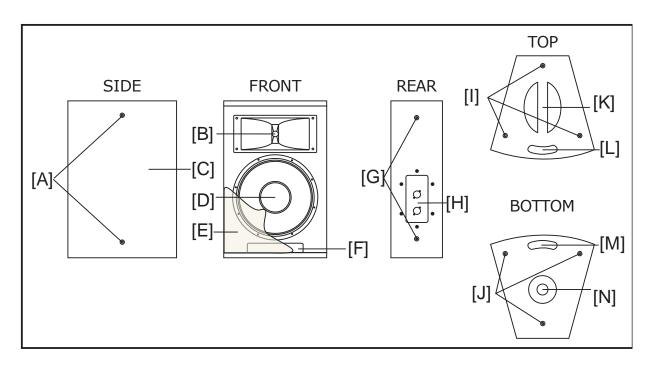

- [A] Side Fixing Points
- [B] HF Driver
- [C] Enclosure Cabinet
- [D] Woofer
- [E] Steel Protection Grid
- [F] Reflex
- [G] Rear Fixing Points

- [H] Connection Panel
- [I] Top Fixing Points
- [J] Bottom Fixing Points
- [K] Handle
- [L] Handle
- [M] Handle
- [N] Pole Mount Cup

Materials and construction meet the highest professional standards to ensure maximum reliability. 6| Operating Manual ver. SP530-EN-1.1



## **TECHNICAL SPECIFICATIONS**

		Hoight 500 [22 22"]
PHYSICAL		Height 590 [23.23"]
	Dimensions mm (±1 mm)	Front Width 390 [15.35"]
	[Inches]	Rear Width 195 [7.68"]
		Depth 395 [15.55"]
		Trapezoidal Angles 13°
	Weight Kilograms	Net Weight 21
		Shipping Weight 23
Max SPL Calco (Power AES)	Fraguency Bosnopes	±5 dB 55 Hz ~ 18 KHz
	Frequency Response	-10 dB 45 Hz
	Sensitivity (1 Watt @ 1 m)	Full Range Passive 98 dB
		LF 98 dB
		HF 106 dB
	Max SPL Calculated	
		125 dB
	[PEAK]  Nominal Input Impedance (Ω)	[129 dB]
SYSTEM PERFORMANCE		Full Range Passive 8 Ω
		LF 8 Ω
		HF 16 Ω
	Power Handling (Watt cont. AES) [PEAK]	Full Range Passive 500 W
		[1275 W]
		LF 450 W [1125 W]
		HF 50 W [125 W]
	Nominal Dispersion (@ -6 dB)	Horizontal 90°
Hommai Dispersion (@ -0 di		Vertical 40°
MECHANYCAL	Enclosure material	Birch Plywood of 18 mm [0.71 inches]
	Finish	Texture poliuretanic black paint
	Suspension	12 Point Mounting Suspension
	Grille	Powder coated perforated steel with anti-dust foam
	Connectors	Neutrik Speakon NL4
	Optional Accessories	Fly Clip with Ring, Speaker Soft Bag

SP530

#### INSTALLATION AND WIRING



SP530 speaker can be mounted to the wall, on a pole or suspended through the suspension points.

For installation on a pole, use the pole mount plate in the bottom of the case.

For suspended installation, there are six brackets inside the case: three in the top, three in the bottom. Each bracket is secured to two adjacent internal side of speaker using two M10 screwbolts.

If needed, replace the screwbolts with eyebolts.

More detailled:

One bracket is connected between top and left side of case.

One bracket is connected between top and right side of case.

One bracket is connected between top and rear side of case.

One bracket is connected between bottom and left side of case.


One bracket is connected between bottom and right side of case. One bracket is connected between bottom and rear side of case.




When installation is in suspended mode, use the upper or lower brackets. Unscrew one of the two screws hold a single bracket, the second screw must be screwed only after the first one has been tightened to avoid the bracket moves.

It is possible to install a maximum of three speakers in cascade using eyebolts.

Use plugs suitable to support the weight of the entire apparatus.

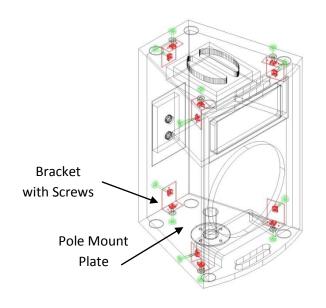

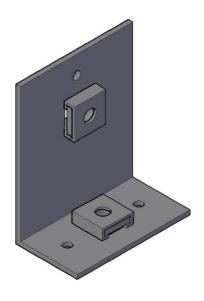



Choose a safe mounting location, so as to prevent the cables can be stepped on or create tripping hazards.


Before making connections between mixer and speakers, make sure the mixer volume is turned down.


In the connection panel there are two Speakon NL4 connectors referred as 'IN' and 'OUT'.


IN is the input connector and must be connected to the amplifier, 'OUT' is a LINK OUT and can be connected to other systems.

Channel 2 has been linked from In to the out.

You can now use the system

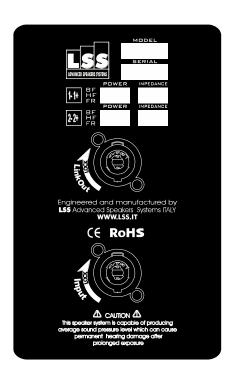

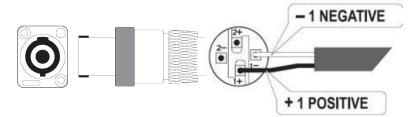

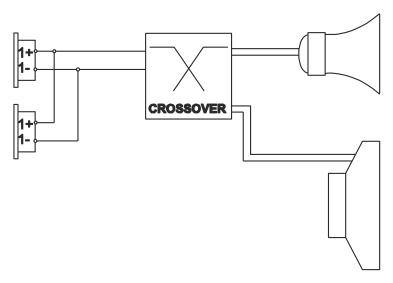

#### **WEEE DIRECTIVE**

#### **WEEE Directive**

#### Warning!

The product is marked with this symbol which indicates not to discard electrical and electronic equipment via the normal procedure for disposal of household waste. For these products there is a diverse collection system in accordance with legislation that requires proper treatment, recovery and recycling of used products. For more information please contact the appropriate local authority.

The black bar underneath indicates that the product was placed on the market after 13 August 2005.

#### INFORMATION FOR PROPER DISPOSAL

#### For home users

#### In the European Union

Warning: To dispose of this equipment, do not use the ordinary dust bin! The electrical and electronic equipment must be treated separately and in accordance with legislation that requires proper treatment, recovery and recycling of used products. Following the implementation by member states, private households within the EU can give free electrical and electronic equipment to designated collection facilities \*.

In some countries (\*), your local retailer may withdraw the old product for free if you purchase a new one of similar type.

**In countries outside the EU**: please contact your local authorities and ask for the correct method of disposal.

**In Switzerland**: Used electrical or electronic equipment can be returned free of charge to the dealer, even if you do not purchase a new product.

Further collection facilities are listed on the homepage or <a href="www.swico.ch">www.swico.ch</a>. www.sens.ch.

#### For professional users

#### In the European Union

Warning: If the product is used for business purposes, the following steps to delete it:

contact your LSS dealer for information about the product recall.

Might be charged for the costs of collection and recycling. Small products (and amounts) might be taken back by your local collection facilities.

**In Spain:** contact the established collection system or the local authority for collection of used products.


**In countries outside the EU**: please contact your local authorities and ask for the correct method of disposal.



<sup>\*</sup> For more information please contact the appropriate local authority.



## **DIMENSIONS**

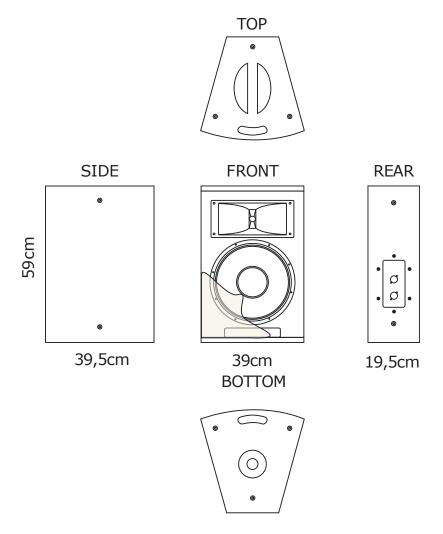

SP530		

## **NOTES**





#### **CONTACT INFORMATION:**

LSS Advanced Speaker Systems
Via On. Longo 53
89024 Polistena (RC) ITALY
Tel (39) 966 9321299 – Fax (39) 966 933007
Email: info@lss.it - Internet: www.lss.it